

# **HousePure Dishwasher Filter Cartridge Change Instructions**

## **WI-HP-DWF-RC2**

### **Twin Pack**

- **Turn on the dishwasher (start wash cycle) until you hear water start to flow into dish washer unit.**
- **Turn off the undersink water supply to dishwasher (sound of water flowing will stop).**
- **Turn off the dishwasher or open the door.**
- **Place a towel under the filter system to absorb any water that may spill during filter change.**
- **Using sump (filter bowl) wrench that came with the filter system, turn the sump to the left until it turns easily.**
- **Continue unscrewing the sump by hand until the sump drops free.**
- **Remove the old filter and install a new one making sure the end of filter cartridge with the large white cap faces up.**
- **Make sure that the large black o-ring is in place in the groove below threads in sump, then screw the sump back onto filter head until resistance is felt.**
- **Using the wrench tighten sump an additional turns until snug.**
- **Turn the water supply back on and check for leaks.**
- **Filter system and dishwasher are now ready for use.**
- **Thanks for buying and using your HousePure DWF. If you have any questions please give our service department a call at 800-322-9283.**
- **In the future, if it is more convenient for you can buy on line replacement cartridges for your HousePure DWF at [www.waterinc.com](http://www.waterinc.com) .**